



GS-CU004

Commentators' Belt Pack

PRODUCT DETAILS

GlenSound Electronics Ltd

Thank you for choosing a new GlenSound product.

All rights reserved.

Information contained in this manual is subject to change without notice, if in doubt please contact us for the latest product information.

If you need any help with your product then we can be contacted at:

GlenSound Electronics Ltd
The Design Buildings
6 Brooks Place
Maidstone
Kent
ME14 1HE
United Kingdom

Telephone: +44 (0) 1622 753662

EMAIL ADDRESSES

General and Technical enquires: office@glenSound.com

 
Sales enquires: sales@glenSound.com

GLENSOUND GS-CU004 MkII

Handbook Contents

<u>Description</u>	Issue 1.0	16/01/23	<u>Page No.</u>
Safety Instructions			4
Product Warranty			5
Declaration Of Conformity			6
RoHs Directive			7
WEEE Directive			8
Button Modes			9
Wiring Information			10
Panel Views			11
Block Diagram			12

IMPORTANT SAFETY INSTRUCTIONS


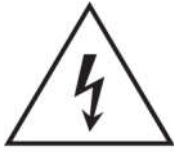


This symbol is intended to warn that dangerous voltages within the product are present and constitute a risk of electric shock.



This symbol is intended to highlight that there are important operating & maintenance instructions in the literature accompanying this unit.

 - 1) Read these instructions
- 2) Keep these instructions
- 3) Heed all warnings
- 4) Follow all instructions
- 5) Do not use this apparatus near water
- 6) Clean only with a dry cloth
- 7) Do not block any ventilation openings. Install in accordance with manufacturer's instructions
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat
- 9) Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has 2 blades with one wider than the other. A grounding type plug has 2 blades and third grounding prong. The wider blade or the 3rd prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet
- 10) Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus
- 11) Only use attachments/ accessories specified/ supplied by the manufacturer
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip over
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped
- 15) Do not attempt to modify this product. Doing so could result in personal injury and/ or product failure

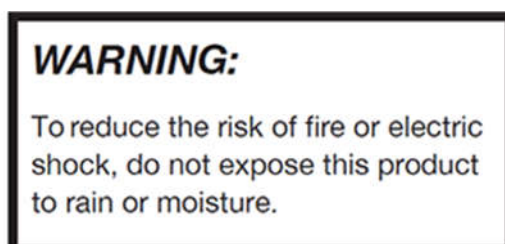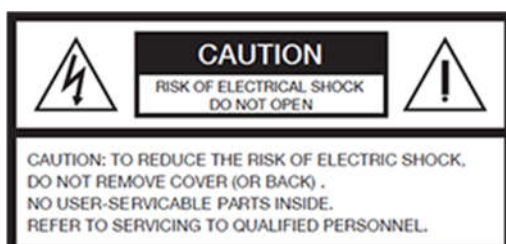

PRODUCT WARRANTY

All equipment is fully tested before dispatch and carefully designed to provide you with trouble free use for many years.

We have a policy of supporting products for as long as possible and guarantee to be able to support your product for a minimum of 10 years.

For a period of one year after the goods have been despatched the Company will guarantee the goods against any defect developing after proper use providing such defects arise solely from faulty materials or workmanship and that the Customer shall return the goods to the Company's works or their local dealer.

All non-wear parts are guaranteed for 2 years after despatch and any defect developing after proper use from faulty materials or workmanship will be repaired under this warranty providing the Customer returns the goods to the Company's works or their local dealer.

C E

EU DECLARATION OF CONFORMITY

GS-CU004 MkII

Commentator's Belt Pack

This declaration of conformity is issued under the sole responsibility of the manufacturer.

This equipment is manufactured by Glensound Electronics Ltd of Brooks Place Maidstone Kent ME14 1HE is C E marked and conforms to the following Union harmonisation legislation:

Emissions: BS EN55032:2015

Immunity: BS EN55035:2017

Signed for and on behalf of Glensound Electronics Ltd.



Marc Wilson, Managing Director
Maidstone, Kent, England

Date: 16/01/2023

RoHS DIRECTIVE

RoHS 2 Directive 2011/65/EU restricts the use of the hazardous substances listed below in electrical and electronic equipment.

This product conforms to the above directive and for these purposes, the maximum concentration values of the restricted substances by weight in homogenous materials are:

Lead	0.1%
Mercury	0.1%
Hexavalent Chromium	0.1%
Polybrominated Biphenyls	0.1%
Polybrominated Diphenyl Ethers	0.1%
Cadmium	0.01%

WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT REGULATIONS 2006 (WEEE)

GlenSound Electronics Ltd is registered for business to business sales of WEEE in the UK our registration number is:

WEE/JJ0074UR

CU004 MkII Button modes

- Momentary

Button is in ON state as long as it is being pressed.

- Latching

Pressing the button turns it ON. To turn the button OFF, press and hold it for about 5 seconds.

- Intelligent

A short press toggles the button state. A long press makes the button momentary - releasing turns it OFF.

Button configurations

It is possible to set one of four configurations of buttons.

# TB mode	PGM mode	TB mutes PGM
1. Momentary	Latching	Yes
2. Intelligent	Intelligent	No
3. Intelligent	Intelligent	Yes
4. Momentary	Intelligent	Yes

To view and change the button configuration:

- Press and hold both PGM and TB buttons for about 3 seconds.

The current button configuration number is shown by a blinking LED on the PPM bar.

Led Configuration

 
+6 dB (top)	4
0 dB	3
-6 dB	2
-12 dB (bottom)	1

- To advance the configuration number press PGM repeatedly, while holding TB down.

When the TB button is released the selected configuration takes effect and is stored in non-volatile memory.

Wiring Information

XLR & Jack Wiring

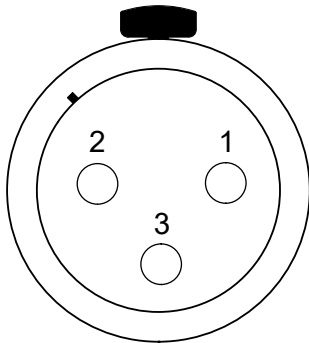

XLR SOCKET (FEMALE)

STANDARD XLR AUDIO PINOUTS:

1: Ground/ Earth

2: INPHASE/ POSITIVE/ MIC +

3: MATE/ NEGATIVE/ MIC -



STANDARD HEADPHONE WIRING:

TIP: A/ LEFT Ear

RING: B/ RIGHT Ear

SLEEVE: Ground / Earth



© 2004

GLENSOUND
ELECTRONICS LTD

ISSUE	DATE
1	11/03/04

GS-CU004
COMMENTATORS
BELT PACK
VIEWS

 
DRAWING NUMBER

A3-15000





DRAWN BY

ORIGINALLY DRAWN USING AUTOTRAX


40MM

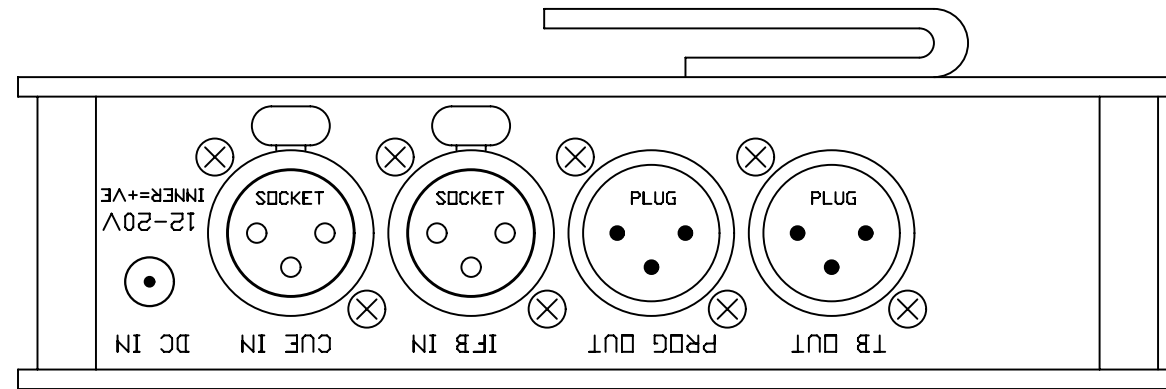

101MM

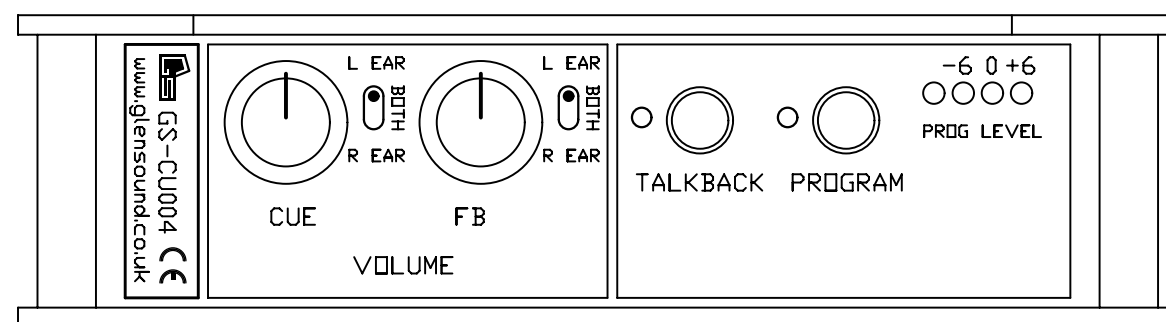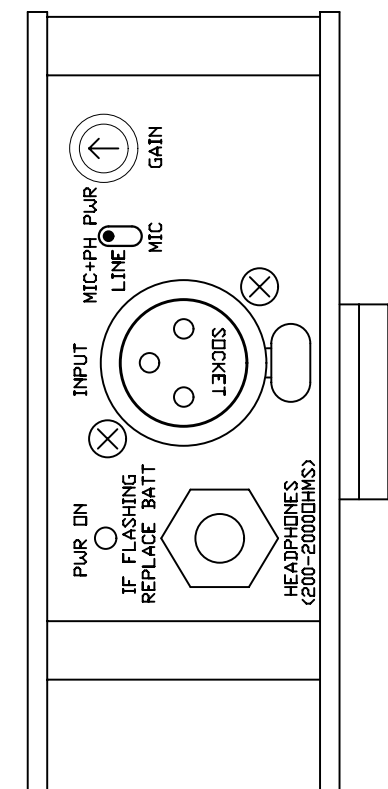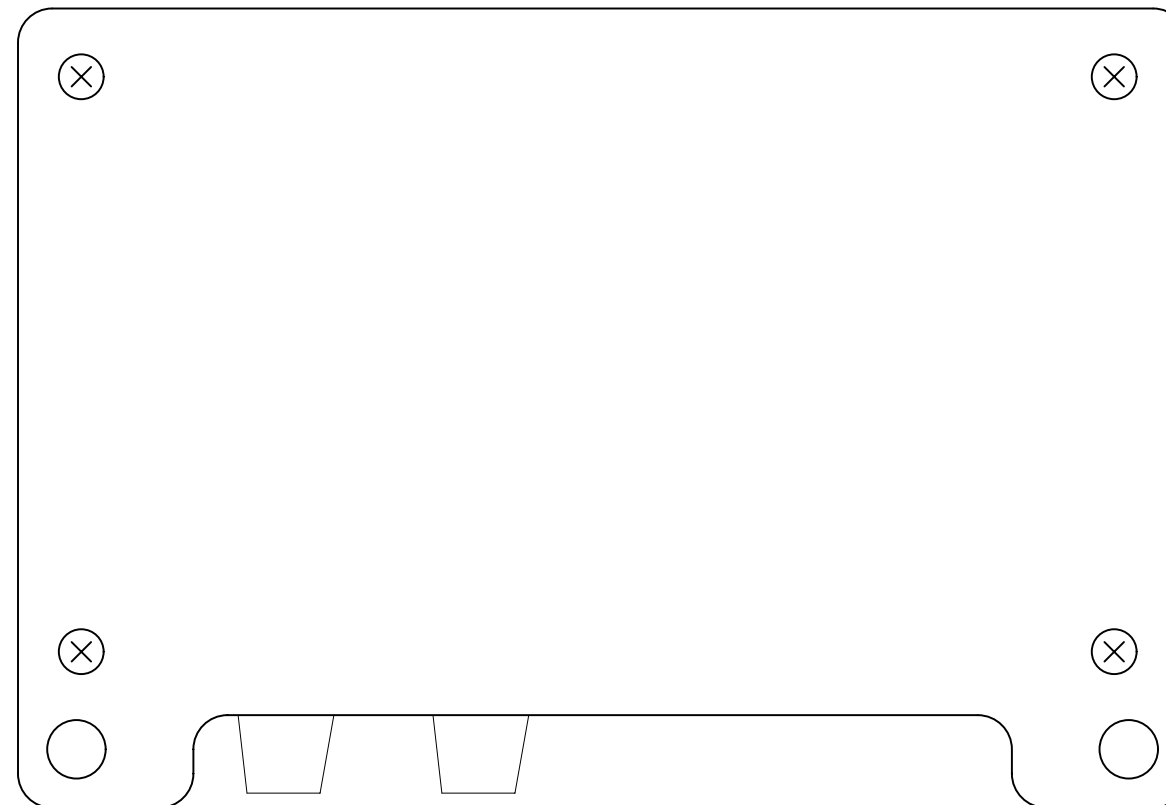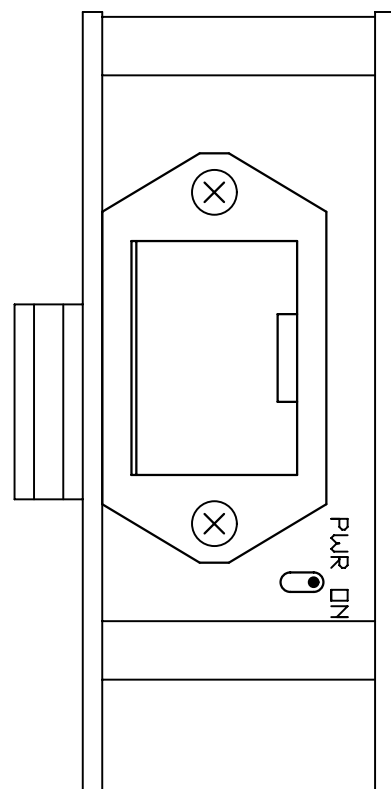    

152MM

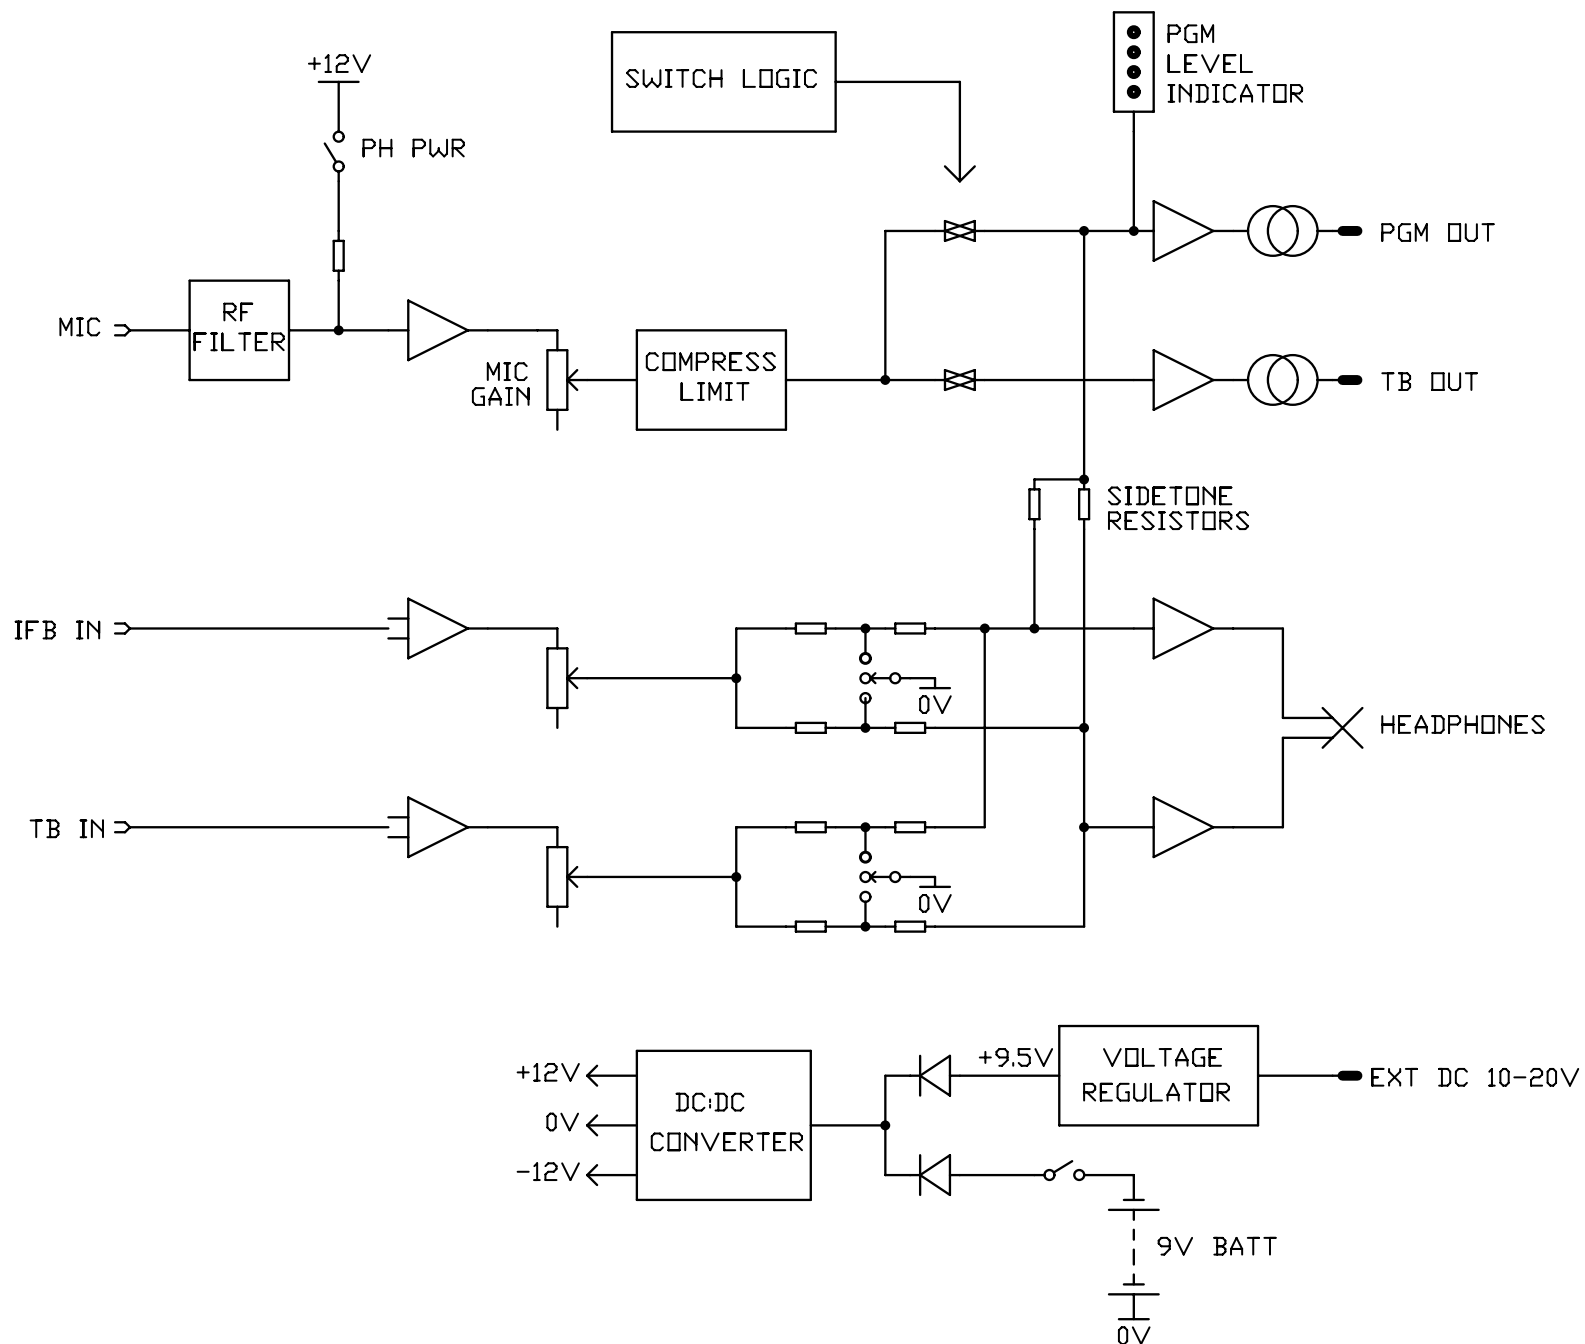 

© 2004

GLENSOUND
ELECTRONICS LTD

ISSUE	DATE
1	11/03/04

GS-CU004
COMMENTATORS
BELT BOX
BLOCK DIAG

DRAWING NUMBER

A4-15001

DRAWN BY

ORIGINALLY DRAWN USING AUTOTRAX