



GlenSound GLENSOUND TECHNICAL NOTES

File Number WP24-87

Issue 2

Date 27/11/13

HOW TO CHANGE BUTTON OPERATION ON THE GS-FW032 &33

The operation of the SPEAK and the SPEAK TO GROUP switches can be altered to suit individual requirements. There are 3 mode options for switch operation.

SWITCH MODE OPTIONS

1. **Momentary:** in this mode switches only work while being pressed
2. **Latching:** in this mode each time the switch is pressed the switch changes state between on and off
3. **Intelligent Lever Key:** in this mode a short 'quick' press on a switch will cause it to either latch on or off and a long press will cause it to work in a momentary fashion only while the switch is being pressed

To change the operation of the SPEAK buttons:

1. Turn the GS-FW032 or 33 off.
2. Hold down either channel 1, channel 2 or channel 3 talkback speak switch. Where channel 1 sets all speak switches to momentary, channel 2 sets all speak switches to latching and channel 3 sets all speak switches to intelligent lever key.
3. Turn the GS-FW032 or 33 on.
4. Release the channel speak switch that was being held down.
5. The switch configuration is now saved in non volatile memory and the GS-FW032 can now be used.

To change the operation of the SPEAK TO GROUP button:

1. Turn the GS-FW032 or 33 off.
2. Hold down the speak to group speak switch *and also* hold down either channel 1, channel 2 or channel 3 talkback speak switch. Where channel 1 sets the speak to group switch to momentary, channel 2 sets the speak to group switch to latching and channel 3 sets the speak to group switch to intelligent lever key.
3. Turn the GS-FW032 or 33 on.
4. Release the speak to group and channel speak switch that was being held down.
5. The switch configuration is now saved in non volatile memory and the GS-FW032 can now be used.