



# BELLA 32

## 34 AUDIO INPUT NETWORK AUDIO MONITOR

### PRODUCT DETAILS





# GlenSound Electronics Ltd

Thank you for choosing a new GlenSound product.

All rights reserved.

Information contained in this manual is subject to change without notice, if in doubt please contact us for the latest product information.

If you need any help with the product then we can be contacted at:

GlenSound Electronics Ltd  
The Design Buildings  
1 – 6 Brooks Place  
Maidstone  
Kent  
ME14 1HE  
United Kingdom

Telephone: +44 (0) 1622 753662

## EMAIL ADDRESSES

General enquires: [sales@glenSound.com](mailto:sales@glenSound.com)

Technical enquires: [techinfo@glenSound.com](mailto:techinfo@glenSound.com)

Sales enquires: [sales@glenSound.com](mailto:sales@glenSound.com)

## **PRODUCT WARRANTY:**

All equipment is fully tested before dispatch and carefully designed to provide you with trouble free use for many years.

We have a policy of supporting products for as long as possible and guarantee to be able to support your product for a minimum of 10 years.

For a period of one year after the goods have been despatched the Company will guarantee the goods against any defect developing after proper use providing such defects arise solely from faulty materials or workmanship and that the Customer shall return the goods to the Company's works or their local dealer.

All non-wear parts are guaranteed for 2 years after despatch and any defect developing after proper use from faulty materials or workmanship will be repaired under this warranty providing the Customer returns the goods to the Company's works or their local dealer.




## EU DECLARATION OF CONFORMITY FOR:

### **BELLA 32**


*32 Input Network Audio Monitor*

This declaration of conformity is issued under the sole responsibility of the manufacturer.

This equipment is manufactured by Glensound Electronics Ltd of Brooks Place Maidstone Kent ME14 1HE is  marked and conforms to the following Union harmonisation legislation:

Low Voltage Directive:	EN60065 and EN62368-1:2014
Emissions:	BS EN55032:2015
Immunity:	BS EN55035:2017

Signed for and on behalf of Glensound Electronics Ltd.

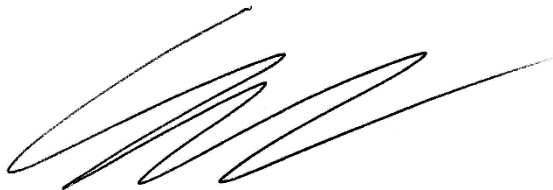

Gavin Davis, Managing Director  
Maidstone, Kent, England

Date: 24/01/2020

## RoHS DIRECTIVE

RoHS 2 Directive 2011/65/EU restricts the use of the hazardous substances listed below in electrical and electronic equipment.

This product conforms to the above directive and for these purposes, the maximum concentration values of the restricted substances by weight in homogenous materials are:

Lead	0.1%
Mercury	0.1%
Hexavalent Chromium	0.1%
Polybrominated Biphenyls	0.1%
Polybrominated Diphenyl Ethers	0.1%
Cadmium	0.01%

# **WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT REGULATIONS 2006 (WEEE)**

Glen sound Electronics Ltd is registered for business to business sales of WEEE in the UK our registration number is:

**WEE/JJ0074UR**

# GLENSOUND BELLA 32

## Handbook Contents

Issue 1

Description

Page No.

### **Contents**

PRODUCT WARRANTY: .....	3
OVERVIEW .....	8
BELLA 32 PANEL LAYOUT .....	9
Front Panel .....	9
Front Panel Features.....	9
Rear Panel .....	13
Rear Panel Features .....	13
AUDIO BLOCK DIAGRAM .....	15
Analogue Representation .....	15
NETWORK AUDIO OUTPUTS/ MIX BUSSES .....	16
CONNECTING THE BELLA 32 TO A DANTE® NETWORK .....	18
Getting Dante Controller .....	18
Connecting Bella 32 To The Network .....	18
Audio Over IP Network.....	18
Running Dante Controller .....	19
Dante Controller TIP .....	19
Device Not Showing Up In Dante Controller.....	20
AES67 MODE.....	21
UPDATING THE BROOKLYN CHIPSET .....	23
SPECIFICATIONS .....	24
WIRING INFORMATION .....	25
Standard XLR Pin Outs.....	25
Standard Headphone Wiring.....	25
D9 Wiring & Loop Interconnecting To External Equipment .....	26

## **OVERVIEW**

Bella 32 is a multi buss summing matrix confidence monitor designed for outside broadcast trucks, studios, theatre and professional audio applications. It is perfect for easy and cost effective monitoring of multiple network audio sources, ideal for busy production environments and perfect for monitoring multiple network intercom & programme feeds.

The name Bella 32 refers to 32 network audio inputs, however there are also 2 local analogue audio inputs on the rear so there are actually 34 front panel monitoring selection switches.

34 front panel monitoring selection switches are provided enabling sources to easily be turned on/off the loudspeaker monitoring mix, or solo'd to this mix if required. Alongside a front panel shaft encoder these 34 front panel switches can also be used to adjust input gain and pan the output of the channel.

In addition to the LS monitoring mix there are a number of fixed ratio mixers providing simple but functional circuits between the network inputs and outputs.

There are 32 network audio outputs in total. These are pre-configured to provide all possible scenarios of monitoring mix outputs (pre LS cut, pre LS Dim, Mono, stereo etc). In addition to the monitoring mix network outputs there are two network outputs derived from the two local analogue inputs and also 14 outputs from the internal mixers.

Three internal 1kHz tone generators and three internal white noise generators provide the final six network audio outputs. Three of each type are provided to provide the 3 most commonly used line up levels in the World.


As well as the network audio outputs 3 line level analogue outputs are provided and an AES3 output, these follow the switched/ solo mix buss.

The 2 front panel loudspeakers are driven from a DSP to compensate for their size, the result is surprisingly good, with clear crisp vocals and highly intelligible reproduction of wider band audio sources. They are driven from a class D amplifier and have more than sufficient output level for most environments.



# **BELLA 32 PANEL LAYOUT**

## **Front Panel**

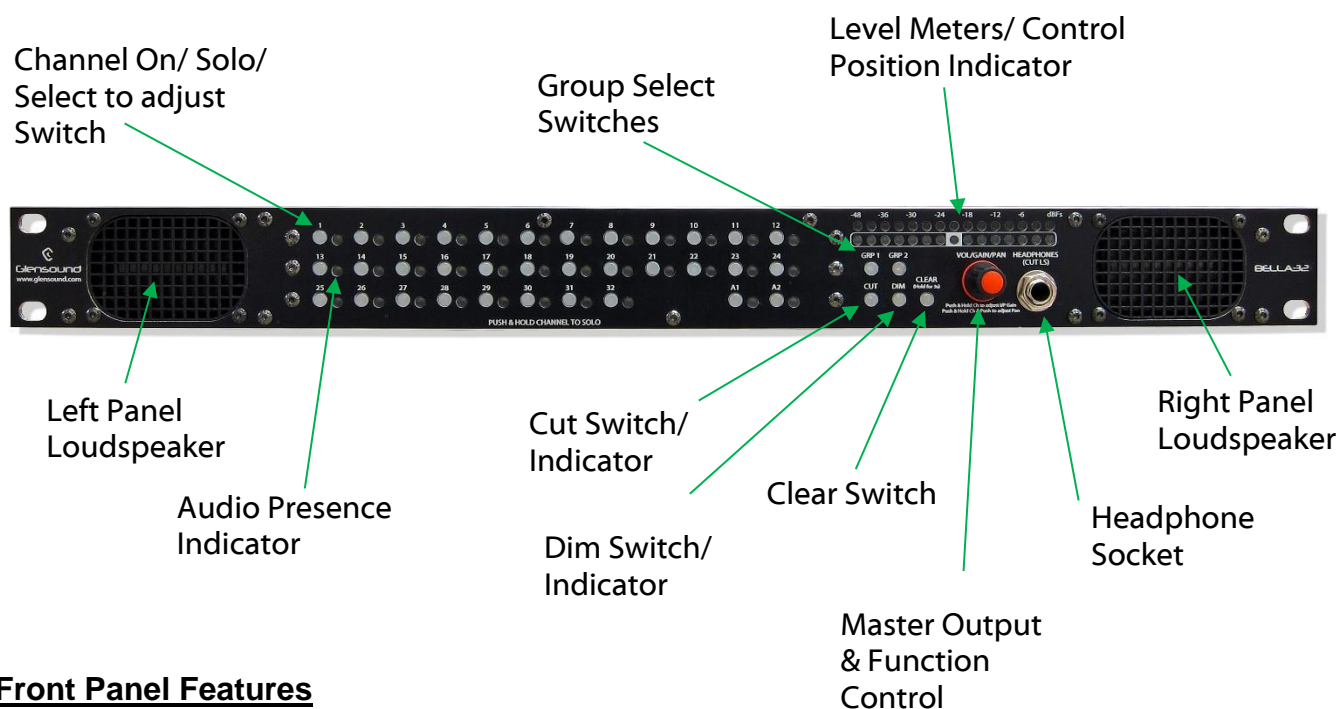

## **Front Panel Features**

### **1. Channel On/ Solo Switch**

These 34 round yellow illuminated switches turn the input of the associated channel on/ off the loudspeaker mix, analogue, AES3 and mix/ solo network audio outputs.

Pressing and holding one of these switches will solo its channels output to the loudspeaker, analogue, AES3 and mix/ solo network audio outputs and will also allow gain and pan to be added to the channel using the Master Output & Function Control.

### **2. Group Select Switches**

Two groups are provided for quick access to regularly monitored sets of audio sources.

To recall a group just press the GRP 1 or GRP 2 switch and the current selection of monitoring channels will be replaced by the pre-saved group selection.

Once finished monitoring a group press the GRP 1 or GRP 2 button again and the monitoring selection will return to its previous settings.

To add or remove channels on a group press and hold the GRP switch and while holding the switch select the channel(s) to be added or removed.

### 3. **Level Meters/ Control Position Indicator**

In normal use these audio level meters provide a PPM style visual indication of the left and right audio channels output levels.

If however one of the channel on/ solo switches is pressed and held down, then the top meter will indicate a mono'd mix of the selected channel's stereo output and the bottom meter is used to indicate the pan position of that channel's output. With the centre highlighted LED indicating that the channel is panned centre.

### 4. **Left Panel Loudspeaker**

This internal loudspeaker is fed audio from the left output of the mix/ solo mix buss. The front panel overall level control adjusts its volume and the front panel Cut & Dim switches also affect it.

There is a rear panel GPI that can turn the internal loudspeakers off.

Inserting a headphone jack in the headphone socket also turns the loudspeaker off.

### 5. **Audio Presence Indicator**

The round green LEDs next to the channel on/ solo switches indicate that incoming audio has been detected on that channel.

It first illuminates dimly when an incoming audio circuit is detected at -40dBFs or above. It then increases its brightness when the incoming audio level reaches -20dBFs.

Once illuminated it will stay illuminated for 3 seconds after it detects the input level to fall below -40dBFs.

The detection level is prior to the channels gain control.

If the Led Flashes this indicates that the input level is either clipping or within 1dB of clipping.

## 6. **Cut LS Switch/ Indicator**

When used this illuminated switch will cut both the front panel loudspeakers and the analogue and AES3 outputs. It will also cut any of the network output circuits that are after the cut control.

A rear panel GPI circuit also affects the state of this switch. If the rear GPI circuit is made (i.e. on) then the switches internal LED will illuminate and pressing the switch will not turn the cut on or off.

There is a 2<sup>nd</sup> rear panel GPI circuit that can be used to cut just the internal loudspeakers. If this 2<sup>nd</sup> GPI circuit is made (i.e. on) then the internal loudspeakers will be cut but the switches internal LED will not be on and this switch will continue to operate a cut on the analogue, AES3 and network outputs.

## 7. **Dim Switch/ Indicator**

When used this illuminated switch will dim both the front panel loudspeakers and the analogue and AES3 outputs. It will also dim any of the network output circuits that are after the dim control.

A rear panel GPI circuit also affects the state of this switch. If the rear GPI circuit is made (i.e. on) then the switches internal LED will illuminate and pressing the switch will not turn the dim on or off.

## 8. **Clear Switch**

This switch allows all input channels to be quickly & easily reset to unity gain, panned centre and de-selected. This is a very useful feature if the Bella 32 is being used to monitor different events/ programs and allows an operator to get the system to a known state before making adjustments for their program.

Just press and hold the switch for at least 3 seconds to reset all incoming audio settings.

The LED in the switch is also used as a confidence indicator when no channel select switches are on.

## 9. **Master Output & Function Control**

This control adjusts several parameters of the Bella 32.

When turned it increases/ decreases the volume of the loudspeakers (and network/ analogue outputs that are after the control). To help the user understand the current physical position of the control (i.e. is it already turned up fully, or maybe just half way?) the two level meters switch from displaying the actual level to displaying the virtual position of the encoder.

If a channel on/ solo switch is pressed and held down while simultaneously turning this control then it will adjust the input gain of the channel.

If a channel on/ solo switch is pressed and held down while simultaneously pushing and turning this control then it will pan the input channel between the left/ right outputs. When adjusting the pan the bottom level meter is used to show the panned position, with the centre highlighted LED indicating panned dead centre.

## 10. **Headphone Socket**

This 6.35mm (1/4") tip ring sleeve (TRS) jack socket provides a stereo output for monitoring the mix/ solo buss.

Inserting a jack into this socket will cut the internal LS, the analogue and AES3 audio outputs and any network audio outputs affected by the cut circuit.

It is suitable of use with headphones with impedances of 100 – 2000 Ohms.


## 11. **Right Panel Loudspeaker**

This internal loudspeaker is fed audio from the right output of the mix/ solo mix buss. The front panel overall level control adjusts its volume and the front panel Cut & Dim switches also affect it.

There is a rear panel GPI that can turn the internal loudspeakers off.

Inserting a headphone jack in the headphone socket also turns the loudspeaker off.

## Rear Panel

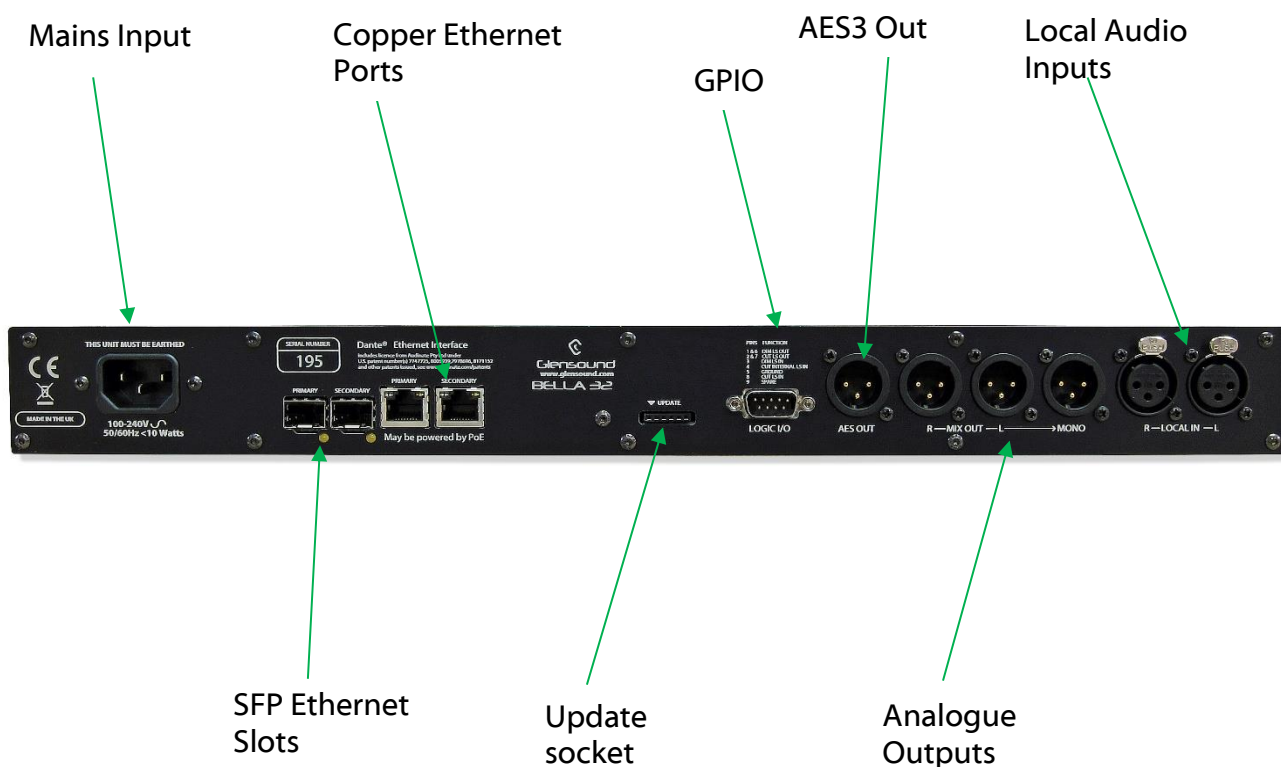

## Rear Panel Features

### 12. Mains Input

The standard IEC mains plug is filtered and accepts external AC voltages of 100 -240 VAC +/- 10%.

There is an internal fuse and maximum current consumption is 10 Watts.

### 13. Copper Ethernet Ports

These 2 copper RJ45 Ethernet ports can accept standard network cables. Only one port is required to be connected to your network to correctly pass Dante®/ AES67 network audio, however both the primary and secondary ports can be used if a redundant network topology is in use.

Both ports are gigabit Ethernet and the LEDs flash to indicate data is being correctly communicated with a switch.

Both copper ports can accept Power Over Ethernet (PoE) supplies and if connected to a suitable network switch or mid span PoE injector these will power the Bella 32.

#### 14. **GPIO**

This 9 pin D plug provides access to the GPIO (General Purpose Inputs & Outputs) circuits. These are useful for connecting to external devices such as red light systems.

Please see the wiring section of this handbook for more details.

#### 15. **AES3 Output**

The AES3 output is an output of the mix/ solo buss' left & right channels. This circuit's sample frequency is 48kHz and it driven as a direct output from the internal DSP.

#### 16. **Local Audio Inputs**

The local audio input XLRs are both balanced analogue with a line up of 0dBu. They are electronically balanced and their inputs can be wired unbalanced.

Their audio input is fed into the mix busses via input channel's 10 'Dante/ Local' toggle switch. The switch needs to be in the 'Local' position for the outputs of these audio inputs to be fed into the mix buss.

#### 17. **SFP Ethernet Slots**

These 2 SFP Ethernet slots can accept most standard SFP (GBIC) modules. Only one port is required to be connected to your network to correctly pass Dante®/ AES67 network audio, however both the primary and secondary ports can be used if a redundant network topology is in use.

Both ports are gigabit Ethernet and the LEDs flash to indicate data is being correctly communicated with a switch.

#### 18. **Update Socket**


The update socket is used by a Glensound authorised engineer in the unlikely event that new internal microprocessor code is required to be installed in the Bella 22. The internal microprocessor is a PIC.

#### 19. **Analogue Output XLRs**

3 analogue output XLRs are provided, marked as 'Mix Out', 'R' (right), 'L' (left) & 'Mono'. These are line level electronically balanced analogue audio circuits with a nominal line up level of 0dBu. Being electronically balanced they can be wired unbalanced if required.

The audio being routed to these circuits is the output of the Mix/ Solo mix buss and they are affected by the Cut and Dim LS circuits and the overall level control.

# AUDIO BLOCK DIAGRAM

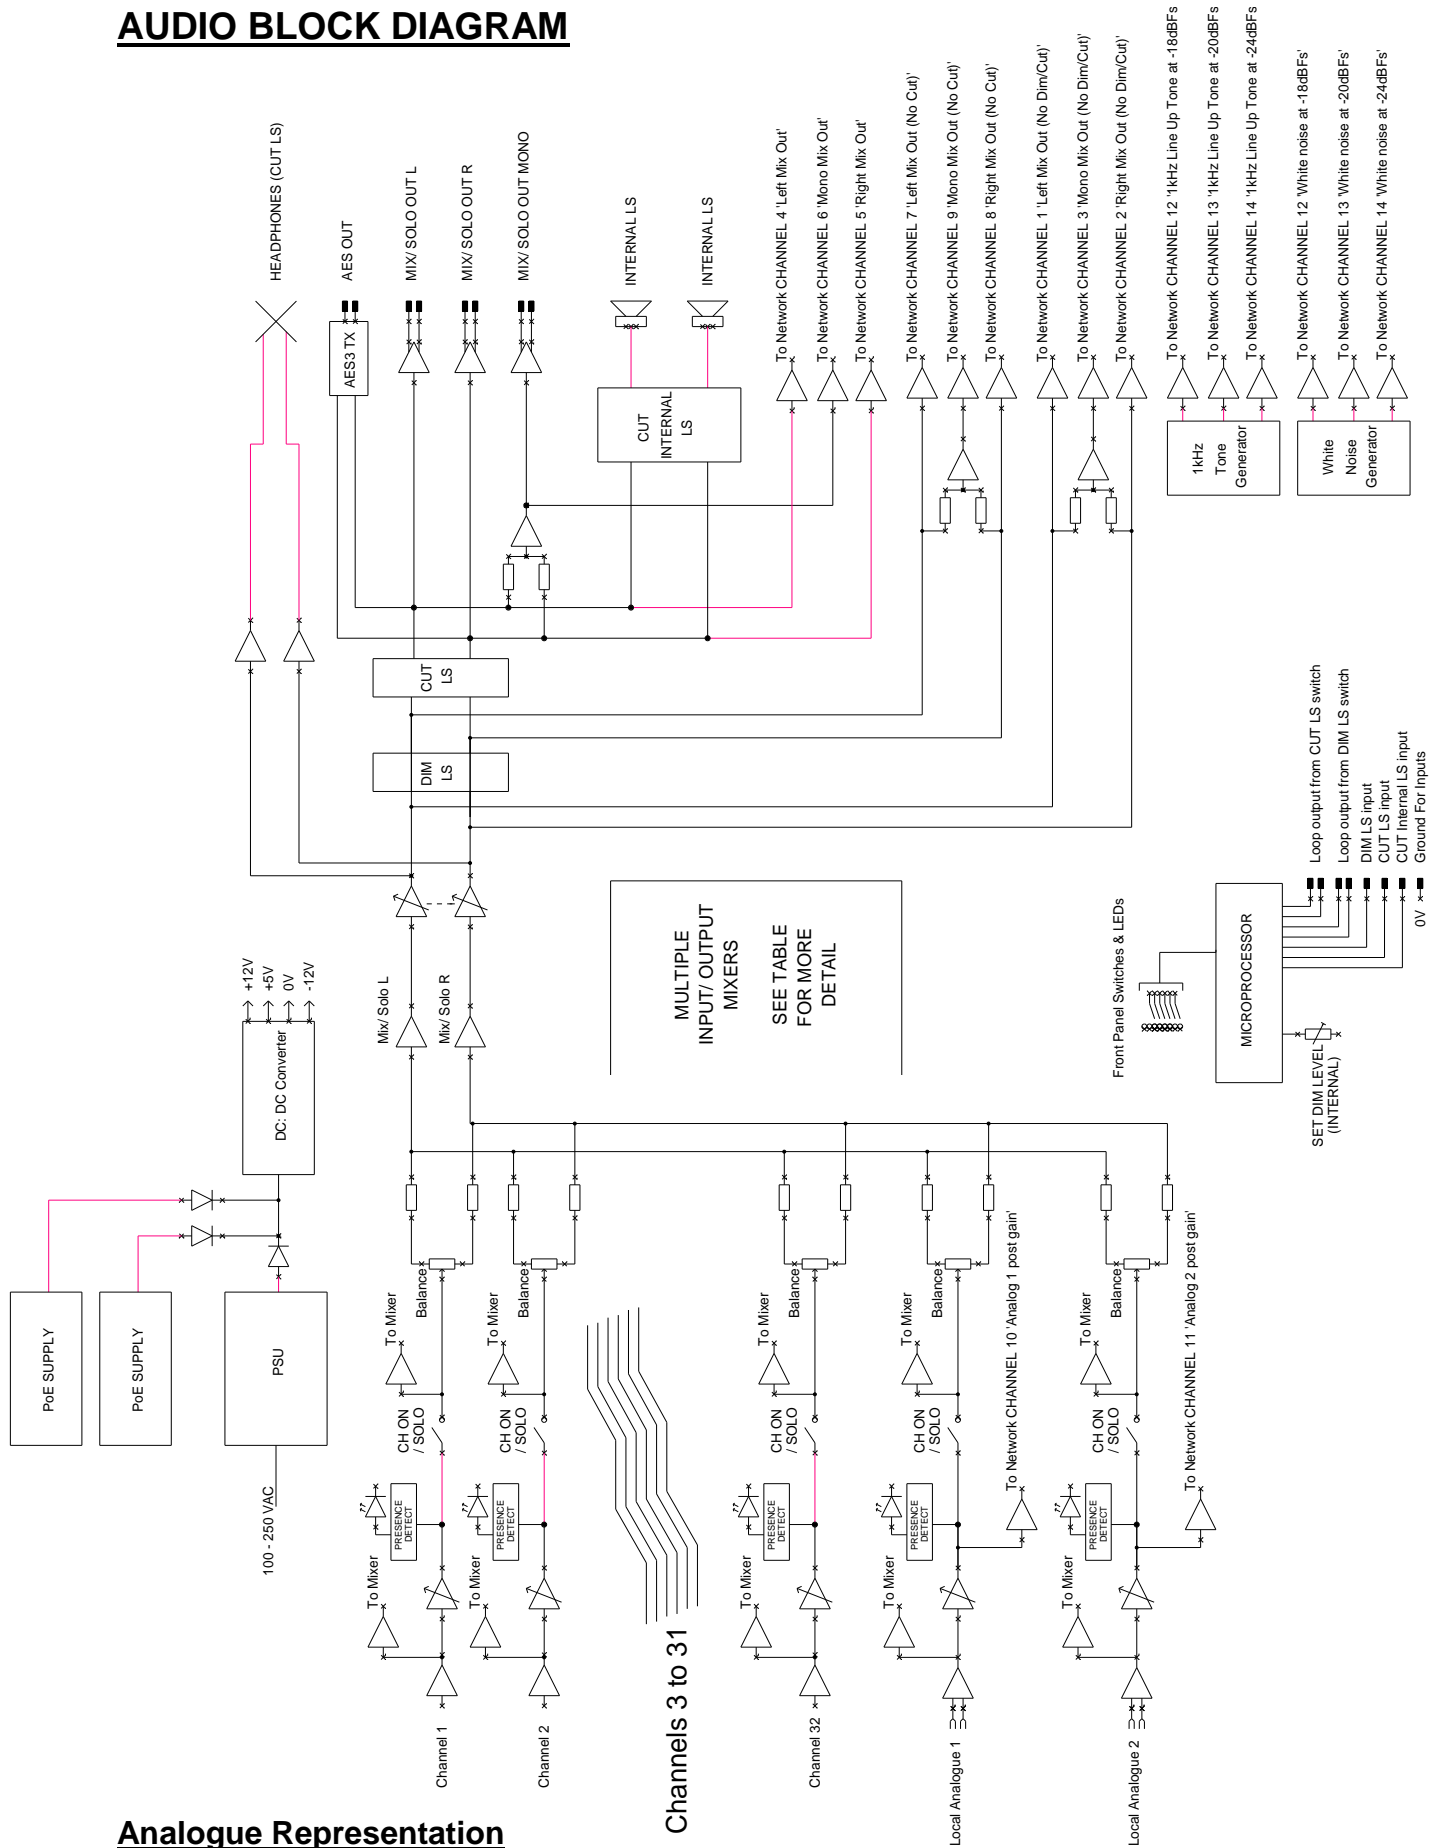

## Analogue Representation

The above diagram is drawn as an analogue audio workflow, however the Bella 32 is a digital device and most functions are actually performed in the digital domain.

## **NETWORK AUDIO OUTPUTS/ MIX BUSSES**

There is one main stereo mix buss within the Bella 22. This is referred to as 'MIX/ SOLO' or sometimes just 'MIX'.

In simple terms the 'MIX/ SOLO' outputs are derived after the front panel Channel On/ Solo buttons. If a channels on switch is off its output will not be sent to the MIX/ SOLO buss. If the soloing feature is used (i.e. a front panel channel on/ solo button held down) then the MIX/ SOLO buss will output just the solo'd channels audio.

The 'MIX' outputs starting from channel 21 in the table below are a permanently on mix. The front panel Channel On/ Solo buttons do NOT affect these mixes, all inputs as defined in the table are always fed into these mix buss outputs.

The MIX/ SOLO outputs are routed to the analogue and AES3 outputs which are always post the master volume control and also always affected by the dim and cut circuits.



OUTPUT	FUNCTION	NOTES
1	Left Mix/ Solo Out (Not effected by DIM/ CUT)	
2	Right Mix/ Solo Out (Not effected by DIM/ CUT)	
3	Mono Mix/ Solo Out (Not effected by DIM/ CUT)	
4	Left Mix/ Solo Out	
5	Right Mix/ Solo Out	
6	Mono Mix/ Solo Out	
7	Left Mix/ Solo Out (Not effected by CUT)	
8	Right Mix/ Solo Out (Not effected by CUT)	
9	Mono Mix/ Solo Out (Not effected by CUT)	
10	Output of analogue 1 input (after internal gain setting)	
11	Output of analogue 2 input (after internal gain setting)	
12	1kHz Line Up Tone at -18dBfs	
13	1kHz Line Up Tone at -20dBfs	
14	1kHz Line Up Tone at -24dBfs	
15	White noise at -18dBfs	
16	White noise at -20dBfs	
17	White noise at -24dBfs	
18	Mix Out of Dante inputs 1 - 12 after front panel select switches	
19	Mix Out of Dante inputs 13 - 24 after front panel select switches	
20	Mix Out of Dante inputs 25 - 32 + A1 + A2 after front panel select switches	
21	Mix Out of Dante inputs 1 - 32	All these mix outputs are pre front panel switches and pre internal gain
22	Mix Out of Dante inputs 1 - 16	
23	Mix Out of Dante inputs 17 - 32	
24	Mix Out of Dante inputs 1 - 8	
25	Mix Out of Dante inputs 9 - 16	
26	Mix Out of Dante inputs 17 - 24	
27	Mix Out of Dante inputs 25 - 32	
28	Mix Out Dante Inputs 1 - 4	
29	Mix Out Dante Inputs 9 - 12	
30	Mix Out Dante Inputs 17 - 20	
31	Mix Out Dante Inputs 25 - 28	
32	Mix Out of analogue 1 in and analogue 2 in	

## **CONNECTING THE BELLA 32 TO A DANTE® NETWORK**

The Bella 32 is a network audio devices utilizing the reliable and versatile Dante® audio over IP protocol. Dante® is a proprietary system (although very widely used) the originators of which are Audinate.

The information below is only meant as a very basic guide. Full details of the power of Dante network audio and instructions for using it can be found at

[www.audinate.com](http://www.audinate.com)

### **Getting Dante Controller**

If you are connecting the Bella 32 to a new Dante network the first thing you will need to do is to get the free Dante controller software from Audinate.

This can be downloaded by visiting Audinate's web site at [www.audinate.com](http://www.audinate.com)

### **Connecting Bella 32 To The Network**

Bella 32s can be connected to the network that you are going to use for your audio distribution simply by plugging in either, and, or any of the network connections on the rear. Once connected to the network it will be possible to see the Bella 32 from within the Dante controller and route its' audio circuits.


### **Audio Over IP Network**

We strongly recommend that you consider your network topology carefully and would not recommend sharing broadcast audio and general data on the same network.

For more details of audio over IP network structure please visit [www.audinate.com](http://www.audinate.com)

## Running Dante Controller

At the time of writing this manual the Dante Controller looks as per the screenshot below:

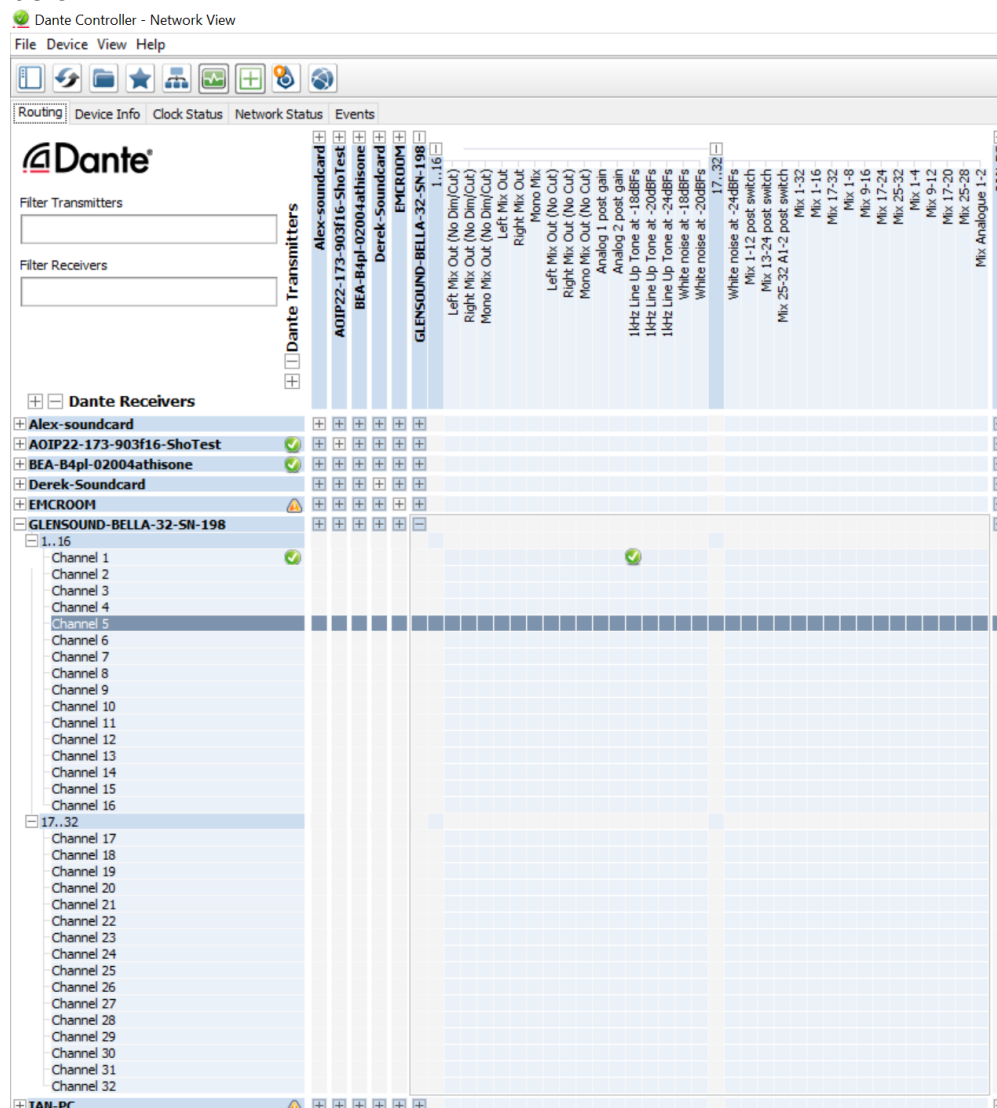

The Bella 32 will have been named at the factory during test to allow them to be identified by the Dante controller.

The format used for the factory name is:

'GLENSOUND-BELLA-32-sn-XXX'

The '-sn-XXX' refers to the serial number of the Bella 32 unit which can be found printed on the rear of the unit.

Note if you upload a new DNT file or clear the devices config then the name will change to Bella 32XX-xxXxXx whereby the 'X's refer to the devices MAC address.

### Dante Controller TIP

If you have never run Dante controller before then make sure that on the bottom left of the Dante controllers' screen 'P' or 'S' is next to a green square as this indicates that it is connected to a network. By clicking 'P' or 'S' a pop up box opens to allow you to set what network interface the controller is using.


## Device Not Showing Up In Dante Controller

If your Dante<sup>®</sup> device does not show up in Dante<sup>®</sup> Controller then the most likely issue is that the device's IP Address is not appropriate for your network.

- A) It maybe that the device is set to obtain an IP address automatically using DHCP (this is the default configuration) and your network is setup for fixed IP addresses only and does not have a DHCP server.
- B) It maybe that the device has had a fixed IP address assigned but that this address is not suitable for your network.

The solution to both scenarios is basically the same.

- 1) You must connect your Dante<sup>®</sup> device directly to the Ethernet port of your computer using an Ethernet cable.
- 2) Make sure that your computer is set to 'Obtain an IP address automatically'
- 3) After a few minutes the Dante<sup>®</sup> device should now appear in Dante<sup>®</sup> Controller.
- 4) Double click the device name to open up device view.
- 5) Open up the 'Network Config' tab
- 6) Either turn on 'Obtain an IP Address Automatically' or correctly configure the 'Manually configure an IP Address' options for your network.
- 7) Click on 'Apply' to confirm the new settings, then disconnect the computer and reconnect the Dante<sup>®</sup> device to your network.

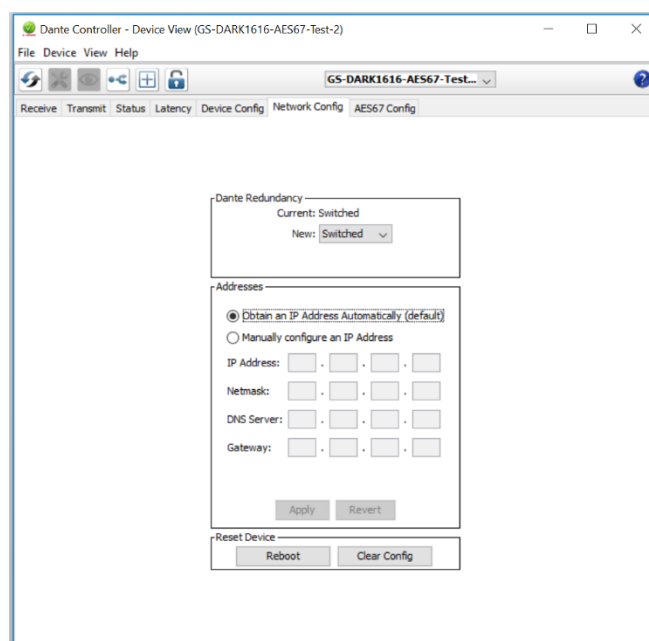


## AES67 MODE

The Bella 32 uses a Brooklyn 2 module from Audinate for its network audio interface. Audinate are the company behind Dante® and as such the module's primary network audio protocol is Dante, however Audinate have enabled their module to comply with AES67 and therefore the Bella 32 can be set to AES67 mode for interaction with other AES67 devices.

Please note however that Glensound are relying on Audinate's AES67 interface and are unfortunately not able to provide full AES67 support for the unit. AES67 support should be sought directly from Audinate.

### 1. Turning On AES67 Mode

If you want to use your Bella 32 on an AES67 network and it has not been set to AES67 mode then this can be set in Dante controller by double clicking the Bella 32 to open the Device View window where you will find an AES67 tab to enable AES67 support.

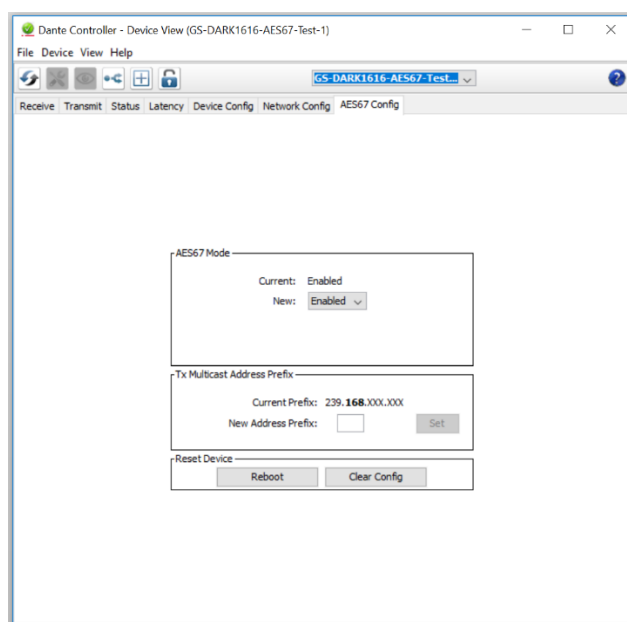


Once the AES67 drop down box has been enabled you'll have to reboot the Bella 32 for the change to take effect. After the reboot go back to the AES67 tab and set the multicast prefix address to one that is suitable for your network.

## 2. Sending AES67 Audio


To transmit AES67 audio to the network a multicast flow must first be setup.

This is done by selecting the 'Create New Multicast Flow' Icon  in the Device View.

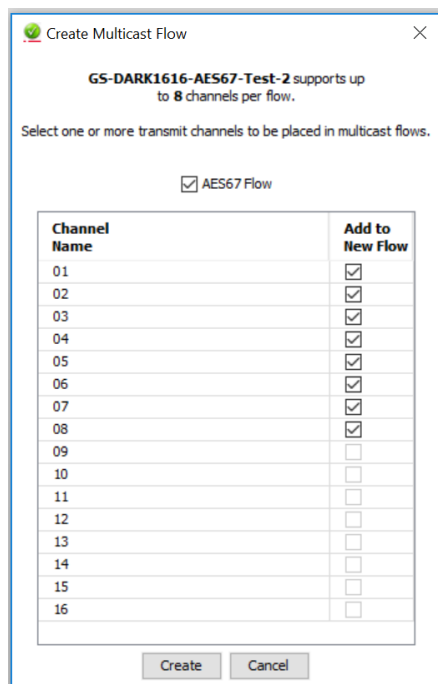

Tick the AES67 Flow check box, then select up to 4 channels to be included in the flow then click 'Create'

Once set the flows can be seen in the transmit tab of the device view.

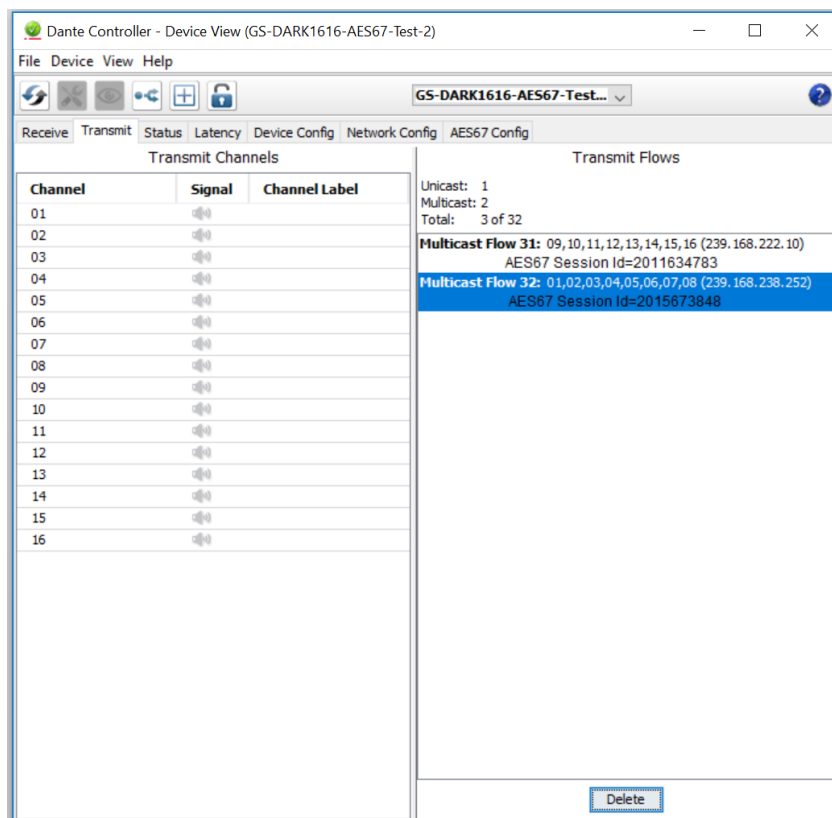

## **UPDATING THE BROOKLYN CHIPSET**

The Brooklyn module is a device supplied by Audinate that does most of the processing for the actual Dante/ AES67 network audio streams. There is one Brooklyn module in each Bella 32. We supply special code (a .dnt file) that sets up/ initiates the Brooklyn module and makes it work in particular way that is compatible to the Bella 32.

### **1. Finding Out Current Installed Version**

Using Dante® controller double click on the Bella 32 device name in the routing tab to open the Device View box.

In the Device View box open the Status Tab.

The 'Product Version:' shows the currently installed version of Brooklyn module dnt code.

### **2. Finding Out What The Latest Available Version Is**

Contact GlenSound to find the latest available version. [sales@glenSound.com](mailto:sales@glenSound.com)

### **3. Updating the Brooklyn module**

The firmware that runs in the Brooklyn module is updated using Audinate's Firmware updating tool. The updating tool and a user guide can be downloaded from Audinate's website:

<https://www.audinate.com/products/firmware-update-manager>

#### **NOTE:**

Please note we strongly advise that when you do the update that only your PC and the Bella 32 that you want to update are on the network to save accidentally updating the wrong Dante device.

## SPECIFICATIONS

### AUDIO

#### Channel Input Gain Controls

+21 to -21dB (In 1.5dB steps)

#### Loudspeaker/ Headphone Gain Control

+10.6dB to Off

#### Channel Off Switch

Fully muted (-infinity dB) when off

#### PPM Range/ Resolution

0dBfs to -48dBfs

3dB Resolution 0 to -36dBfs

6dB Resolution -36 to -48dBfs

#### Channel Output Pan

Fully Off to +3dB

#### Analogue Input Type

Electronically balanced

(can be wired unbalanced)

#### Analogue Input Impedance

>20kOhms

#### Analogue Input Connectors

Neutrik XLRs

#### Analogue Input Line Up

Line level (0dBu (-18dBfs))

#### Analogue Input Frequency Response

$\geq$  0.5dB 22Hz to 22kHz

Measured at Mix Output Mono

#### Analogue Input THD + Noise (ref +8dBu)

$\geq$  0.004% @ 1kHz

#### Analogue Output type

Electronically balanced

#### Analogue Output Connectors

Neutrik XLRs

#### Analogue Output Impedance

<50 Ohms

#### Maximum Analogue Output Level

+17.4dBu

#### Analogue Output Frequency Response

$\geq$  -0.1dB 22Hz to 22kHz

#### Analogue Output Noise

-91dB @ lineup (residual noise)

#### Analogue Out THD + Noise (ref =8dBu)

0.002% @ 1kHz

#### Headphone Impedance

100 - 1000 Ohms

#### Maximum Headphone Level

+17dBu into 600 Ohms

#### Present LED Threshold

-40dBfs (Dim LED) -20dBfs (Bright LED)

#### Present LED Hold Time

3 seconds

### SIZE & POWER

#### Dimensions

19" wide 1 RU high 185mm deep (chassis)

#### Weight

1800g (3.95 Pounds)

#### Mains Input

100 to 240VAC 50/60Hz

#### Power Consumption

<10 Watts

#### PoE (Power Over Ethernet)

Maybe powered on either copper network port

Complies to: IEEE 802.3af-2003

Classification Class 0

#### Shipping Weight

4Kg

#### Shipping Carton

Export quality cardboard carton

62 x 41 x 12 cms

### INCLUDED ITEMS

#### Rj45 Cable

1 x 2M Rj45 network cable

#### Handbook

Download From Website

#### Mains Cable

1 x IEC Mains cable

(UK & Europe Only)

### NETWORK AUDIO

#### Primary Network Protocol

Dante®

#### AES67

Compliant

#### SMPTE 2110

Compliant

#### DDM

Certified

#### Sample Frequency

48kHz

#### Resolution

24 Bit

#### Network Interface Type

Gigabit Ethernet

#### Network Interface Physical

2 x Rj45 copper

2 x SFP Slots (SFP Modules Not Included)

### ENVIRONMENTAL

#### Operating Temperature

0 to +50°C (32 to 122°F)

#### Storage Temperature

-20 to +70 °C (-4 to 158°F)


#### Relative Humidity

0 to 95% non-condensing



## WIRING INFORMATION


### Standard XLR Pin Outs

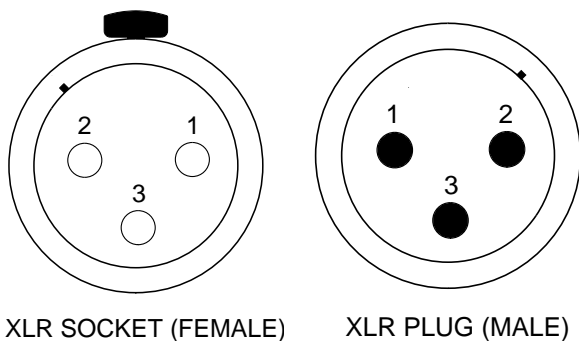

### STANDARD XLR AUDIO PINOUTS:

- 1: Ground/ Earth
- 2: INPHASE/ POSITIVE/ MIC +
- 3: MATE/ NEGATIVE/ MIC -

### Standard Headphone Wiring

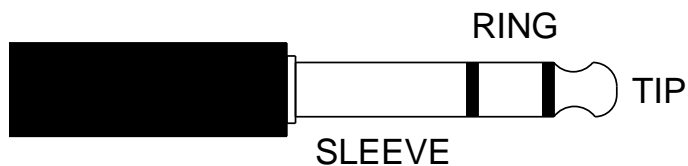


### STANDARD HEADPHONE WIRING:

- TIP: A/ LEFT Ear
- RING: B/ RIGHT Ear
- SLEEVE: Common/ Earth

## D9 Wiring & Loop Interconnecting To External Equipment

### 9 Pin D Plug Fitted to Device

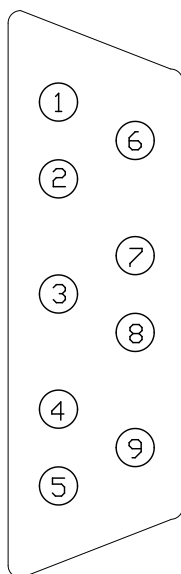

- 1) Loop Out 1 DIM LS
- 6) Loop Out 1 DIM LS
- 2) Loop Out 2 CUT LS
  
- 7) Loop Out 2 CUT LS
- 3) Input DIM LS
- 8) Input CUT LS
  
- 4) Input CUT INTERNAL LS (see note)
- 9) Spare Input
- 5) Ground

#### **LOOP OUTPUT NOTE:**

Internal device: Solid State Relay  
Maximum current: 0.1A  
Maximum voltage: 200 Volts

#### **LOOP INPUT NOTE:**

To operate connect circuit to ground  
Maximum current: 3mA  
High voltage level: +3.3 Volts

#### **CUT INTERNAL LS INPUT**

Making this loop does not illuminate the LED in the front panel CUT LS switch.